

PQC-20007

Important safety instructions

WARNING: Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. This product is not a toy. Keep it out of reach of children.
2. Please keep the product away from pets.
3. Warning this power bank is with lithium polymer battery inside
4. Do not try to open the power bank.
5. Do not expose to heat, water, moisture, direct sunlight!
6. Do not attempt to replace the battery yourself- you may damage the battery, which could cause overheating and injury. Repairs or service should only be performed by qualified personnel.
7. Battery must be recycled or disposed of separately from household waste. Do not incinerate the battery.
8. To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
9. Please remove the charging cable when the power bank is fully charged.
10. Product operating and storage temperature is from 5 degree Celsius to 35 degree Celsius. Under and over this temperature might affect the function.
11. Do not drop or expose to impact shock in any way.



Item Overview

1. 5V USB-A Output Port 1
2. 5V USB-A Output Port 2
3. 5V USB-C Input/Output
4. 5V USB-Micro Input
5. Battery Indicator
6. Indicator ON/OFF Button

Package contains:

Power bank

USB-A <-> USB-Micro charging cable

User Manual

Specification:

- *Battery capacity: 20000mAh
- *Quick charge function
- *Charge via **USB-Micro** or USB-C
- *Micro USB Input: 5V/2A 9V/2A
- *USB-C Input: 5V/2.4A 9V/2A
- *Output: USB-A or USB-C
- *Output: 5V3A 9V2A 12V1.5A
- * Output power: Max 18W
- * With LED capacity indicator

CHARGING THE POWER BANK

Plug in the supplied cable to your wall charger or computer USB port.

The USB connector goes to your charger, the micro USB goes to your power bank. If fully depleted the power bank will take around **13-14** hours to fully charge.

CHARGING YOUR DEVICE USING THE POWER BANK

Plug the cable into the USB port on the power bank, the other end goes into your device. Battery LED indicator will light up, and your device will show it is charging. Click ON/OFF button to turn on the indicator, and it will shut off automatically. There are 4 LEDS displaying the battery capacity, if there is only one or two LEDS, it needs to be charged more. After you have charged your device, recharge the power bank before using again.

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



denver.eu



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

DENVER A/S

Omega 5A, Soefte

DK-8382 Hinnerup

Denmark

www.facebook.com/denver.eu